

GM-100

Manual

A stand-alone reader is the product designed to automatically open the door using a password or RF card when you enter the auto sliding door and access control.

1. USER MANUAL - How to register and delete

Function key : *(Cancel, End) #(Enter)

Card key registrantion (by address)

Card: Admin code(X2) → # → **1#** → Attach your card to reader
(Repeat from) → #(End)

By address: Admin code(X2) → # → **2#** → Press your address to register
→ # → Attach your card to reader → (repeat from) → *(End)

Card key registrantion (by address)

Digital key: Admin code(X2) → # → **3#** → Press your to register →
(4~8 digits) → # → Repeat from → *(End)

By address: Admin code(X2) → # → **4#** → Press your address to register
→ # → Press your digital key to register(4~8 digits) → # → *(End)

How to delete all cards & digital key

Card: Admin code(X2) → # → **6#** → Admin code → *(End)

Digital key: Admin code(X2) → # → **7#** → Admin code → *(End)

How to delete card & digital key individually

All by address: Admin code(X2) → # → **8#** → Press address
to delete → # → Repeat → *(End)

By card: Admin code(X2) → # → **9#** → Attach your card → # → *(End)

Address number

Card: 0001 ~ 7000

Digital key: 7001 ~ 7100

**If you register additional digital key, you should register by address
If you register new basic digital key, the original one will be deleted**

2. USER MANUAL - How to change setting

How to change relay output time

Admin code(X2) → # → **11#** → Press input time(01~60sec) → # (End)

How to use key switch

ON: Admin code(X2) → # → **22#** → *(End)

OFF: Admin code(X2) → # → **33#** → *(End)

**The door changes open mode when you press your key or attach your card first
The door changes lock mode when you press your key or attach your card second**

Forced open setting

Forced open on: Admin code(X2) → # → **55#**(End)

Forced open off: Admin code(X2) → # → **66#**(End)

How to change admin code(Make sure to change it after installation)

Admin code(X2) → # → **99#** → Admin code → # Press new admin code
4 digits) → # → *(End)

How to reset admin code to factory setting

Turn off your reader → Turn on your reader while pressing **1,2,3** at the same time

How to reset your reader to factory setting

Turn off your reader → Turn on your reader while pressing ***,#,0** at the
same time

Caution: It deletes all registered cards and digital key